



# SINGLE FOLDING GATE

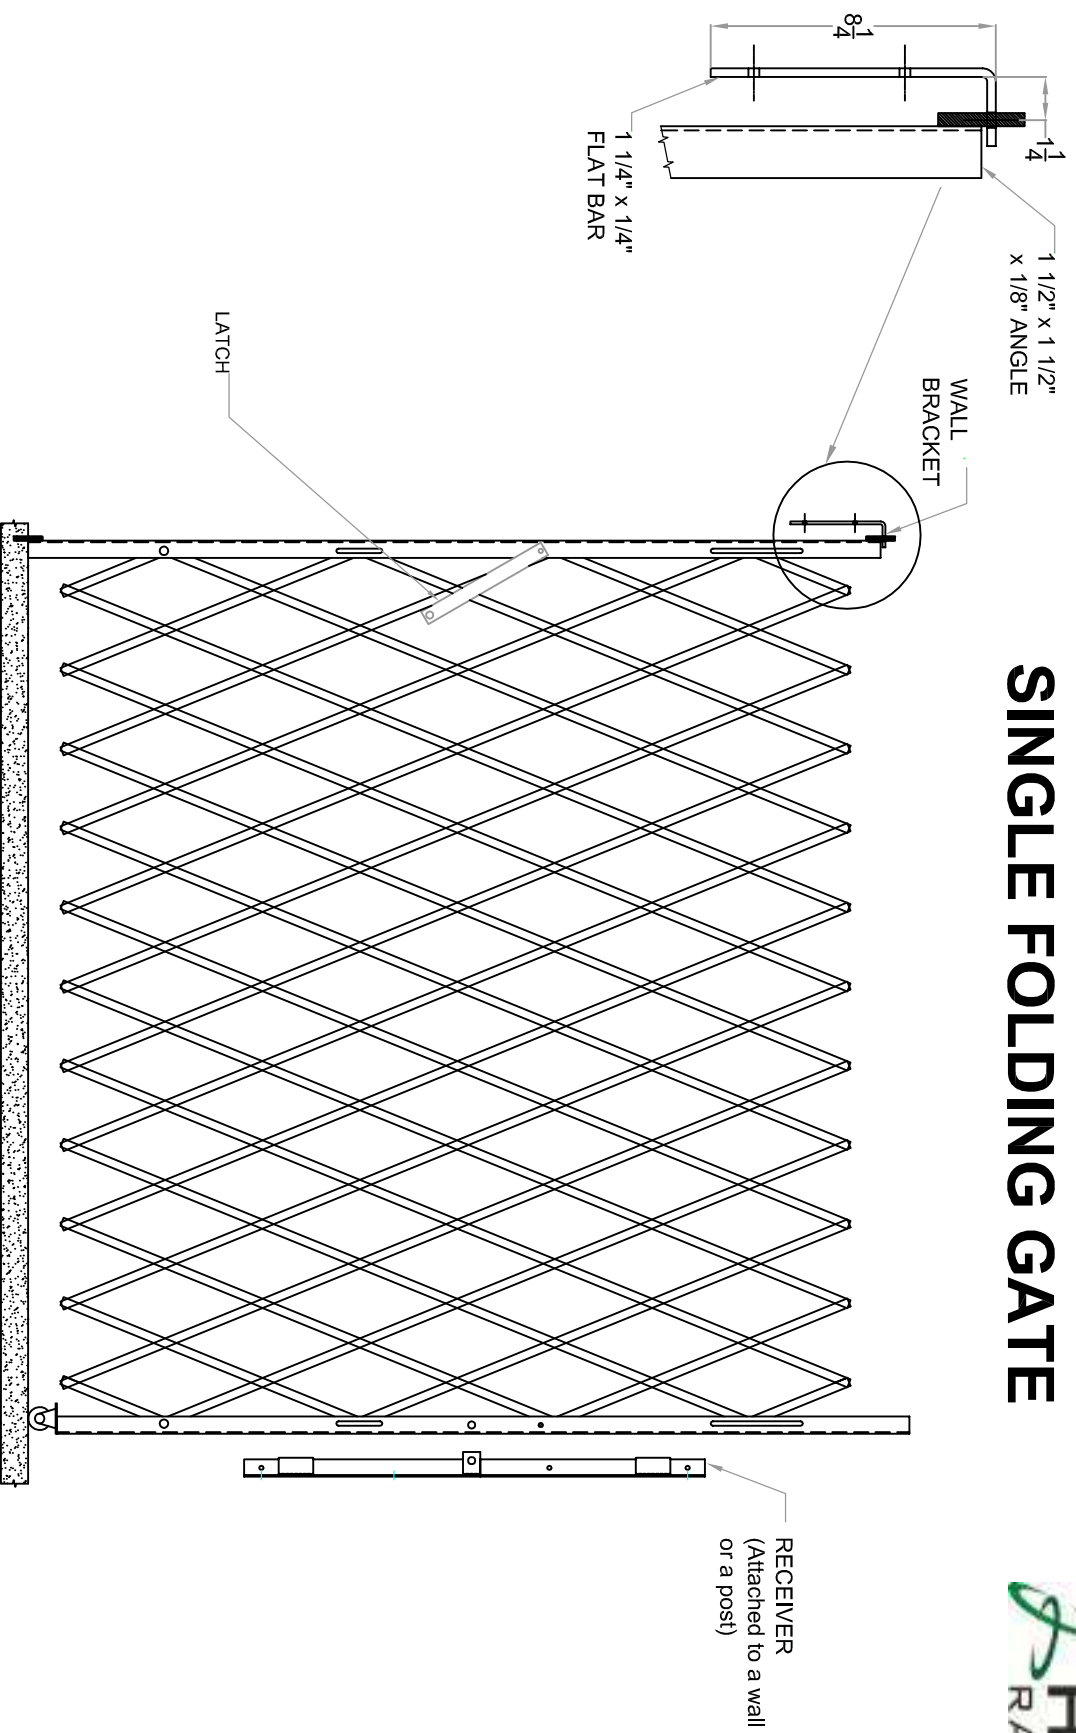

## Installation Instructions:

- Mark the center of the hole on the floor  $1\frac{1}{2}$ " away from the wall.
- Drill a  $\frac{5}{8}$ " diameter hole about 2" deep into the floor to accommodate the bottom mounting pin.
- Insert the pin through the washer and into the floor.
- With the gate inserted into the drilled hole, extend the gate. Install the Wall Bracket. Recommended install for Wall Bracket is as follows:
  - Wood - Use  $\frac{5}{16}$ " x 2" lag bolts
  - Steel - Drill and tap for  $\frac{5}{16}$ " x 2" bolts
  - Brick or Concrete -  $\frac{5}{16}$ " x 3" lag bolts in  $\frac{3}{8}$ " holes with wood or lead anchors
- Install the receiver. Follow the same mounting parameters as mentioned in the above step.

# DOUBLE FOLDING GATE

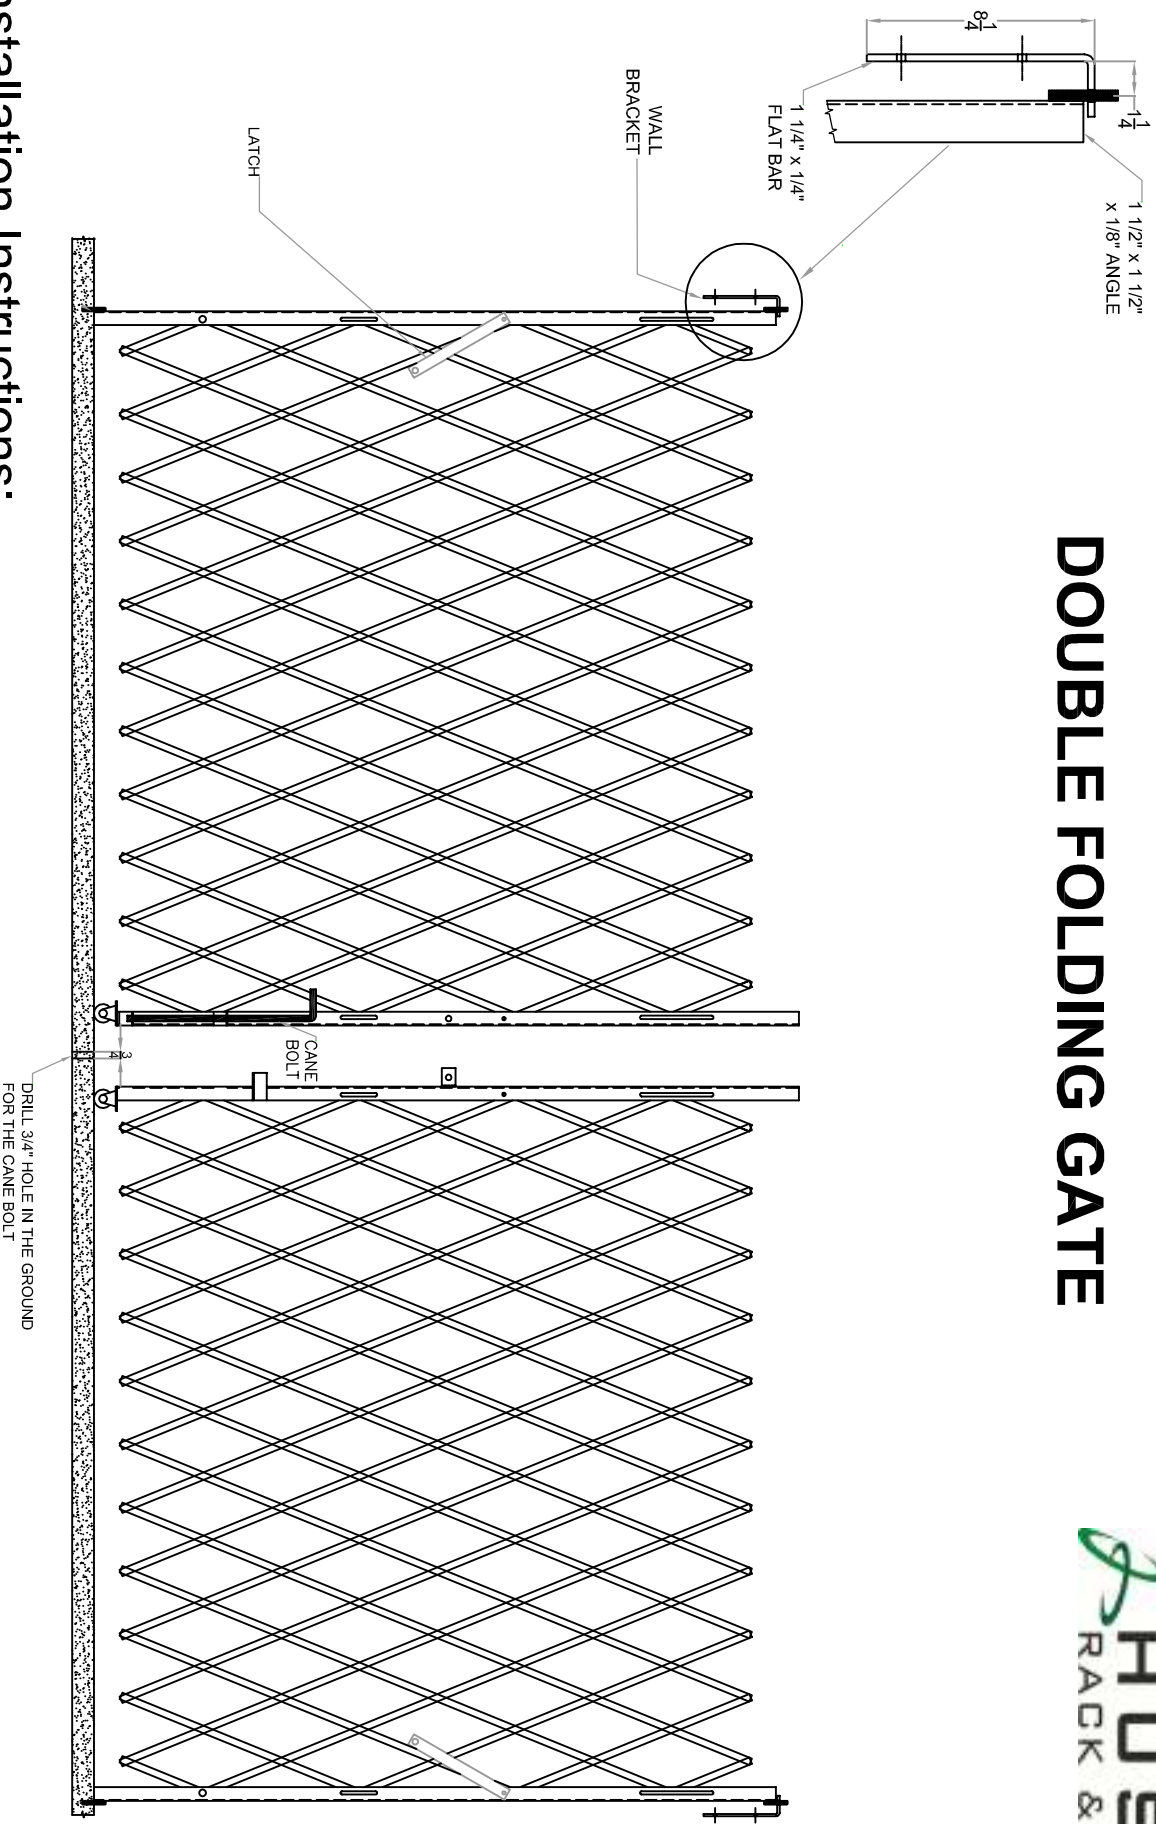

## Installation Instructions:

- Mark the center of the hole on the floor  $1\frac{1}{2}$ " away from the wall.
- Drill a  $\frac{5}{8}$ " diameter hole about 2" deep into the floor to accommodate the bottom mounting pin.
- Insert the pin through the washer and into the floor.
- With the gate inserted into the drilled hole, extend the gate. Install the Wall Bracket. Recommended install for Wall Bracket is as follows:
  - Wood - Use  $\frac{5}{16}$ " x 2" lag bolts
  - Steel - Drill and tap for  $\frac{5}{16}$ " x 2" bolts
  - Brick or Concrete -  $\frac{5}{16}$ " x 3" lag bolts in  $\frac{3}{8}$ " holes with wood or lead anchors
- Follow the same instructions as above for other side of the gate.
- Stretch both gates to the center of the door opening and drill a  $\frac{3}{4}$ " hole for the Cane Bolt.
- Use an optional pad lock for extra security.